



170-T0B Air Cleaner & Muffler

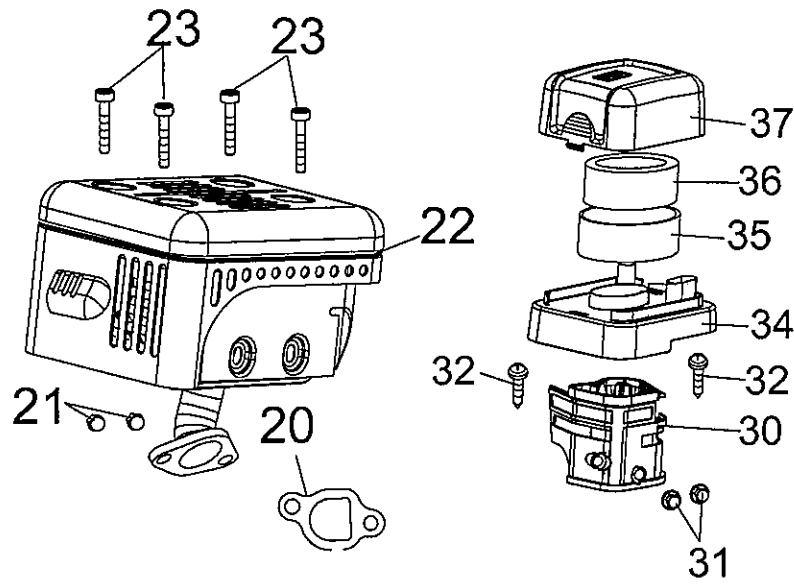

Ref.	Part Number	Description
20	951-11285	Exhaust Pipe Gasket
21	712-04214	Nut, M8
22	951-12156	Muffler Assembly
23	710-05002	Bolt
30	951-10806	Air Cleaner Housing
31	712-04213	Nut
32	710-05102	Self-Tapping Bolt M4.2×16
34	951-12135	Silencer Plate
35	951-10794	Air Cleaner Assembly
36	951-10794	Air Cleaner Assembly
37	951-12136	Air Cleaner Cover


170-T0B Carburetor

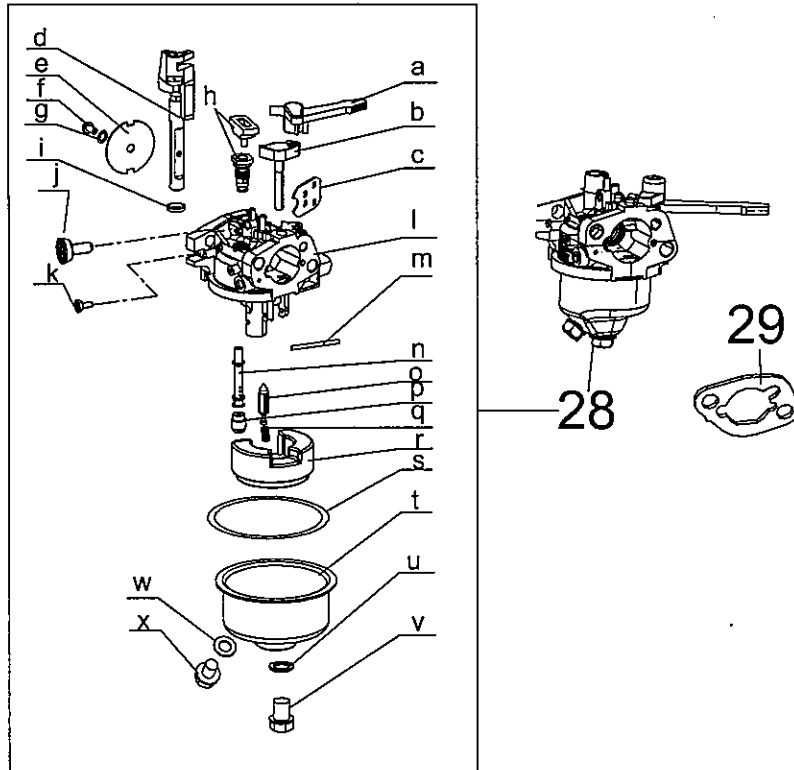

Ref.	Part Number	Description
28	951-12124	Carburetor Assembly
29	951-11571	Carburetor Gasket Plate
a	951-11177	Control Lever,Choke
b	N/A	Choke Shaft
c	N/A	Choke Plate
d	N/A	Throttle Shaft
e	N/A	Throttle Plate
f	N/A	Screw M3x5
g	N/A	Lock Washer
h	N/A	Idle Jet Assembly
i	N/A	Gasket, Throttle Plate
j	N/A	Idle Speed Adjusting Screw
k	N/A	Mixture Screw
l	N/A	Carburetor Body

Ref.	Part Number	Description
m	N/A	Float Pin
n	N/A	Emulsion Tube
o	N/A	Needle Valve
p	N/A	Main Jet
q	N/A	Needle Valve Spring
r	N/A	Float
s	951-11589	Fuel Bowl Gasket
t	N/A	Fuel Bowl
u	951-11348	Fuel Bowl Gasket
v	710-04945	Fuel Bowl Mounting Bolt
w	951-11349	Fuel Drain Plug Gasket
x	710-04938	Fuel Drain Plug
	951-12119	Carburetor Kit - Major (Incl Ref. l,m,n,o,p,q,r,s,u & w)

170-T0B Crankcase

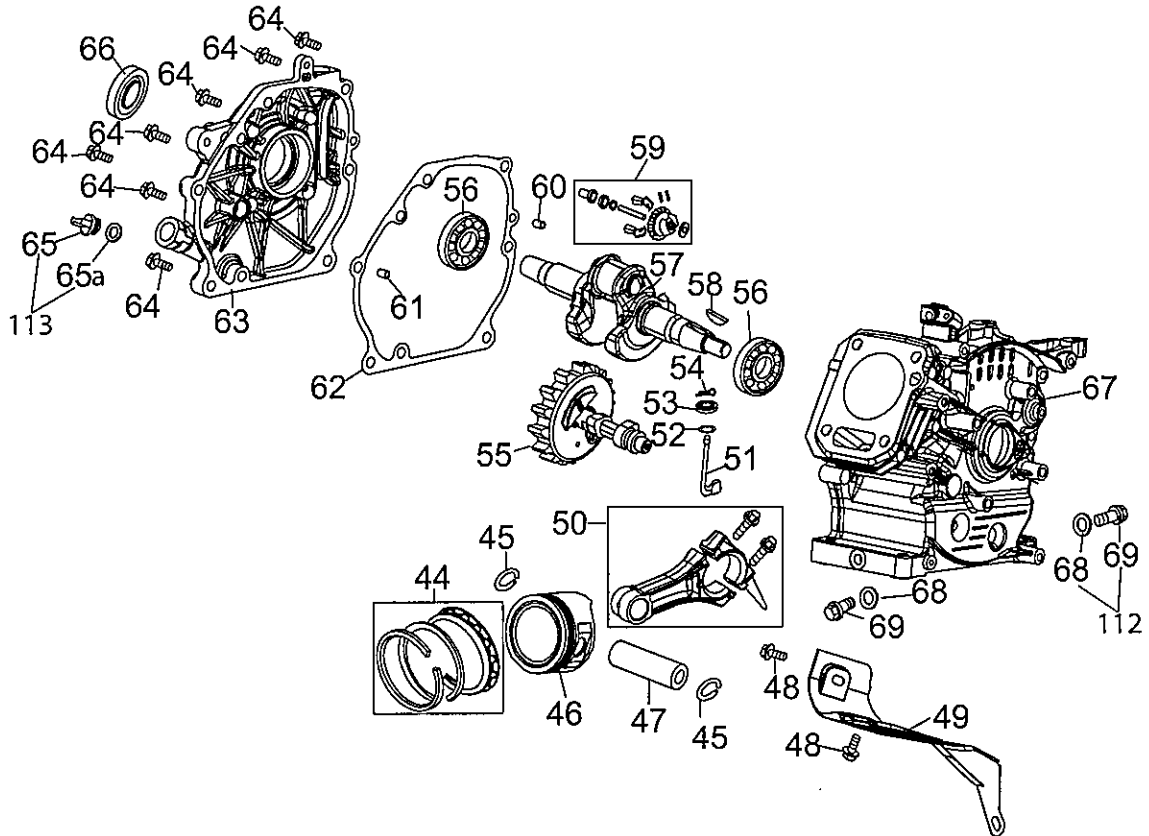


170-TOB Crankcase

Ref.	Part Number	Description
44	951-11253	Piston Ring Set
45	951-11632	Piston Pin Snap Ring
46	951-12007	Piston
47	951-11633	Piston Pin
48	710-04915	Bolt M6×12
49	951-11113	Air Shield
50	951-11573	Connecting Rod Assembly
51	951-11356	Governor Arm Shaft
52	736-04461	Washer 5.2×1.9
53	951-11574	Governor Seal
54	714-04074	Cotter Pin
55	951-11575	Camshaft Assy.
56	951-11369	Radial Ball Bearing, 6205
57	951-12160	Crankshaft Assembly
58	951-10307	Woodruff Key
59	951-11576	Governor Gear/Shaft Assembly

Ref.	Part Number	Description
60	715-04092	Dowel Pin 7×14
61	715-04089	Dowel Pin 9×14
62	951-11371	Crankcase Cover Gasket
63	951-12125	Cover Comp, Left Crankcase
64	710-04932	Bolt M8×32
65	951-11377	Oil Filler Plug Ass'y
65a	951-11577	O-Ring
66	951-11578	Oil Seal, 25×41.25×6
67	951-12155	Short Block (Incl Ref. 4,20,25,26,38, 40,41,44-47,50-70
68	736-04440	Washer 10×16×1.5
69	710-04906	Oil Drain Plug
112	951-10370	Oil Drain Plug & Washer Assembly
113	951-11283	Oil Fill Plug Assembly


170-T0B Fuel Tank

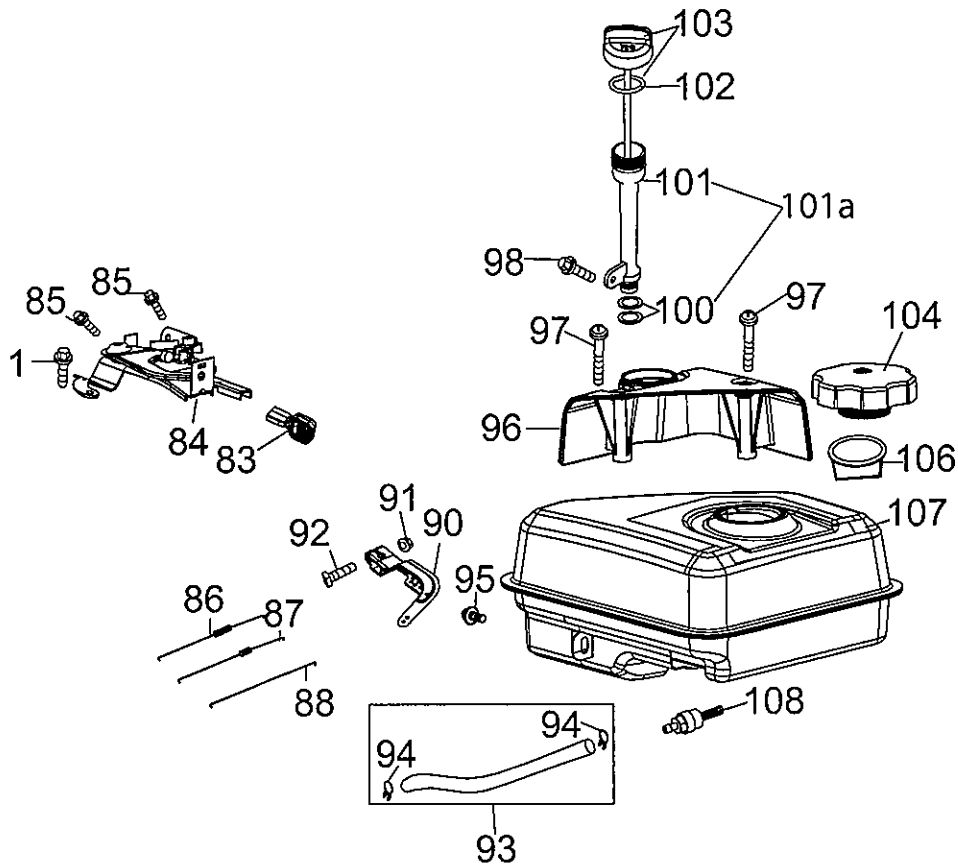

Ref.	Part Number	Description
1	710-04968	Bolt M6x16
83	951-11067	Throttle Control Knob
84	951-12131	Primer Bracket
85	710-04928	Bolt M6x12
86	951-11585	Governor Spring
87	951-10664	Throttle Linkage Spring
88	951-10665	Throttle Linkage
90	951-11106	Governor Arm
91	712-04212	Nut M6
92	710-04908	Governor Arm Bolt
93	951-10650	Fuel Line Kit
94	951-11700	Fuel Hose Clamp
95	710-04915	Bolt M6x12

Ref.	Part Number	Description
96	951-10662	Dipstick Decoration Cover
97	710-04905	Bolt
98	710-04915	Bolt M6x12
100	951-11903	Oil Fill Tube O-Ring
101	951-10656	Oil Fill Tube
101a	951-11913	Oil Fill Tube Assembly
102	951-11904	Oil Fill Tube O-Ring
103	951-11912	Dipstick Assembly
104	951-10917	Fuel Cap Assembly
106	951-11933	Fuel Filter
107	951-12159	Fuel Tank
108	951-10651	Fuel Tank Nipple


170-T0B Flywheel & Shroud

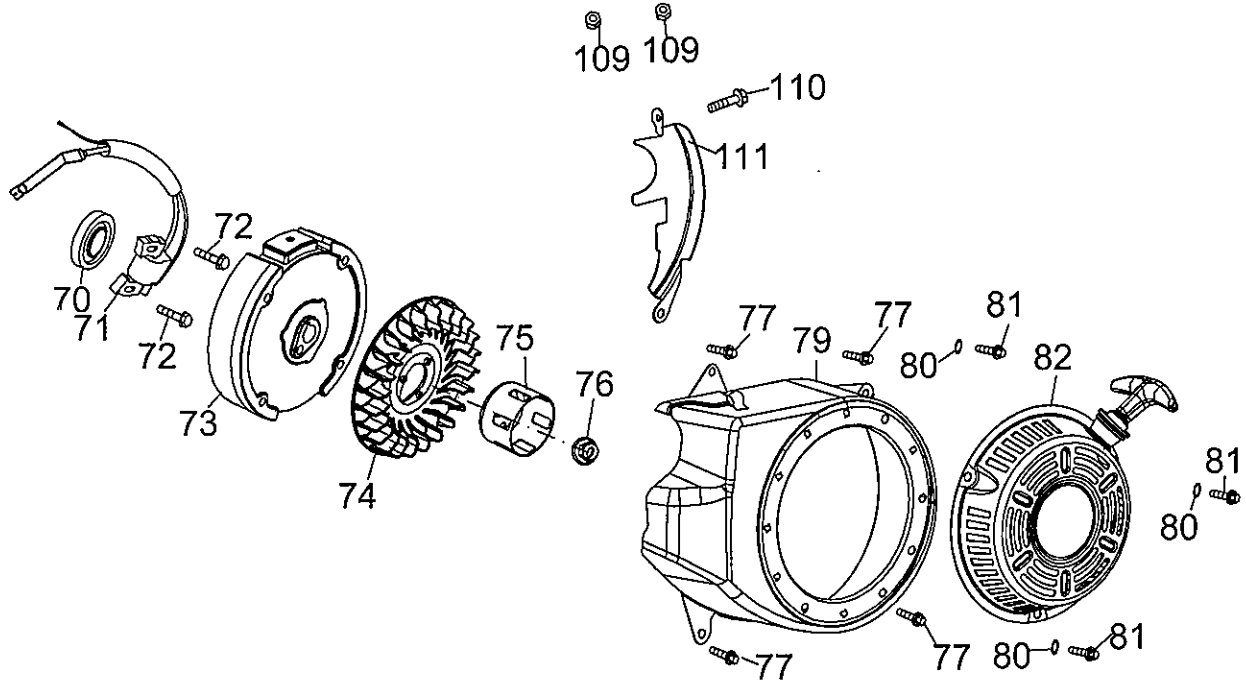

Ref.	Part Number	Description
70	951-12126	Oil Seal 25x41.25x6
71	951-10792	Ignition Coil Assembly
72	710-04919	Bolt M6x25
73	951-10805	Flywheel
74	951-10909	Fan, Cooling
75	951-10911	Pulley, Starter
76	712-04209	Nut, Special, M14x1.5
77	710-04915	Bolt M6x12

Ref.	Part Number	Description
79	951-11583	Blower Housing
80	736-04455	Flat Washer
81	710-04974	Bolt M6x10
82	951-12127	Recoil Starter
109	712-04212	Nut, M6
110	710-04918	Bolt M6x20
111	951-11109	Blower Housing Shield

170-TOB Cylinder Head

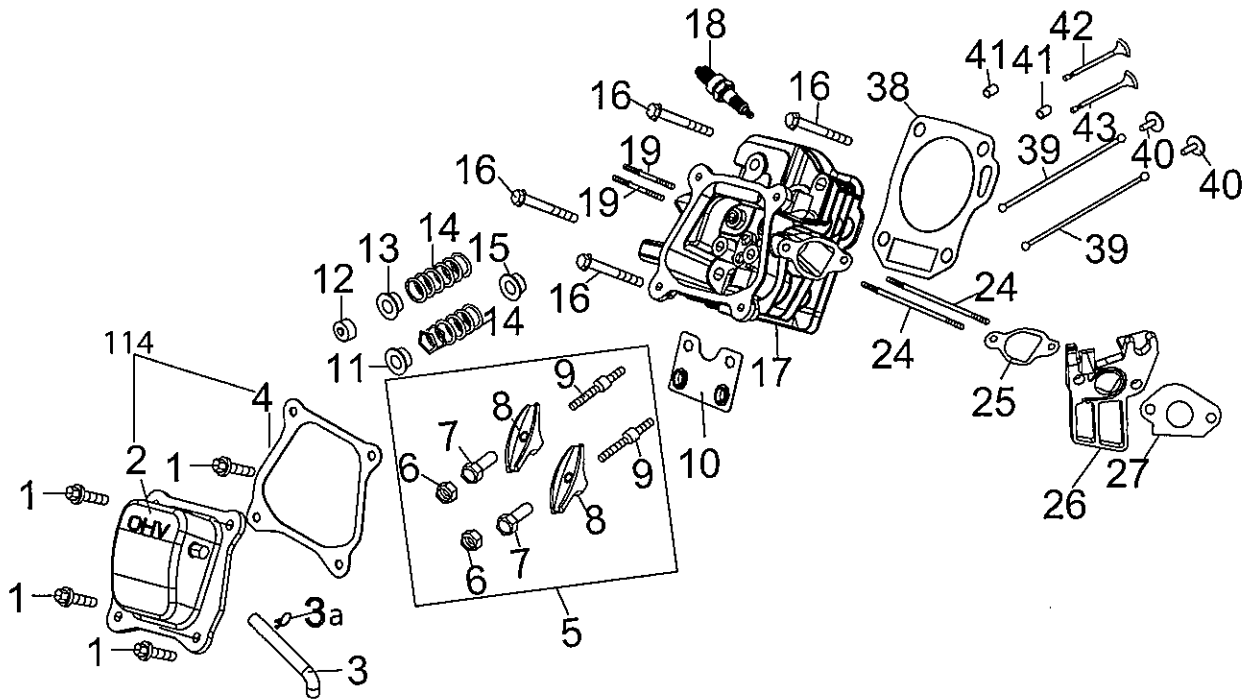

170-T0B Cylinder Head

Ref.	Part Number	Description	Ref.	Part Number	Description
1	710-04968	Bolt M6x16	19	710-05276	Muffler Stud M8x36
2	951-11054	Valve Cover	19	951-10657	Muffler Stud Assembly
3	731-07059	Breather Hose	24	710-05101	Stud M6x110
3a	726-04101	Hose Clamp	25	951-11567	Carburetor Insulator Gasket
4	951-11565	Valve Cover Gasket	26	951-11568	Carburetor Insulator
5	951-11892	Rocker Arm Assembly	27	951-11569	Carburetor Gasket
6	751-11124	Nut, Pivot Locking	38	951-11572	Gasket, Cylinder Head
7	751-11123	Adjusting Nut, Valve	39	951-10648	Push Rod
8	951-11893	Rocker Arm	40	951-11899	Tappet
9	710-04902	Bolt, Pivot	41	715-04090	Dowel Pin 10x16
10	951-11895	Push Rod Guide	42	951-10647A	Valve Kit
11	951-12000	Retainer, In.Valve Spring	43	951-10647A	Valve Kit
12	951-12002	Adjuster, Exh Valve	114	951-11063A	Valve Cover Kit
13	951-12003	Retainer, Ex.Valve Spring		951-10819	Cylinder Head Service Kit (Incl Ref. 4,15,16 & 38)
14	951-12004	Valve Spring		951-12120	Gasket Kit, External (Incl Ref. 4,20,25,26,27,29 & 68)
15	951-11894	Intake Valve Seal		951-12121	Gasket Kit, Complete (Incl Ref. 4,20,25,26,27,29,38,52, 53,62,66,68 & 70)
16	710-04933	Bolt M8x55			
17	951-10668A	Cylinder Head Assembly (Incl Ref. 4,6-15,17,20, 25,26,38,42 & 43)			
18	951-10292	Spark Plug/F6Rtc			