


Engine Model 5P70MOB

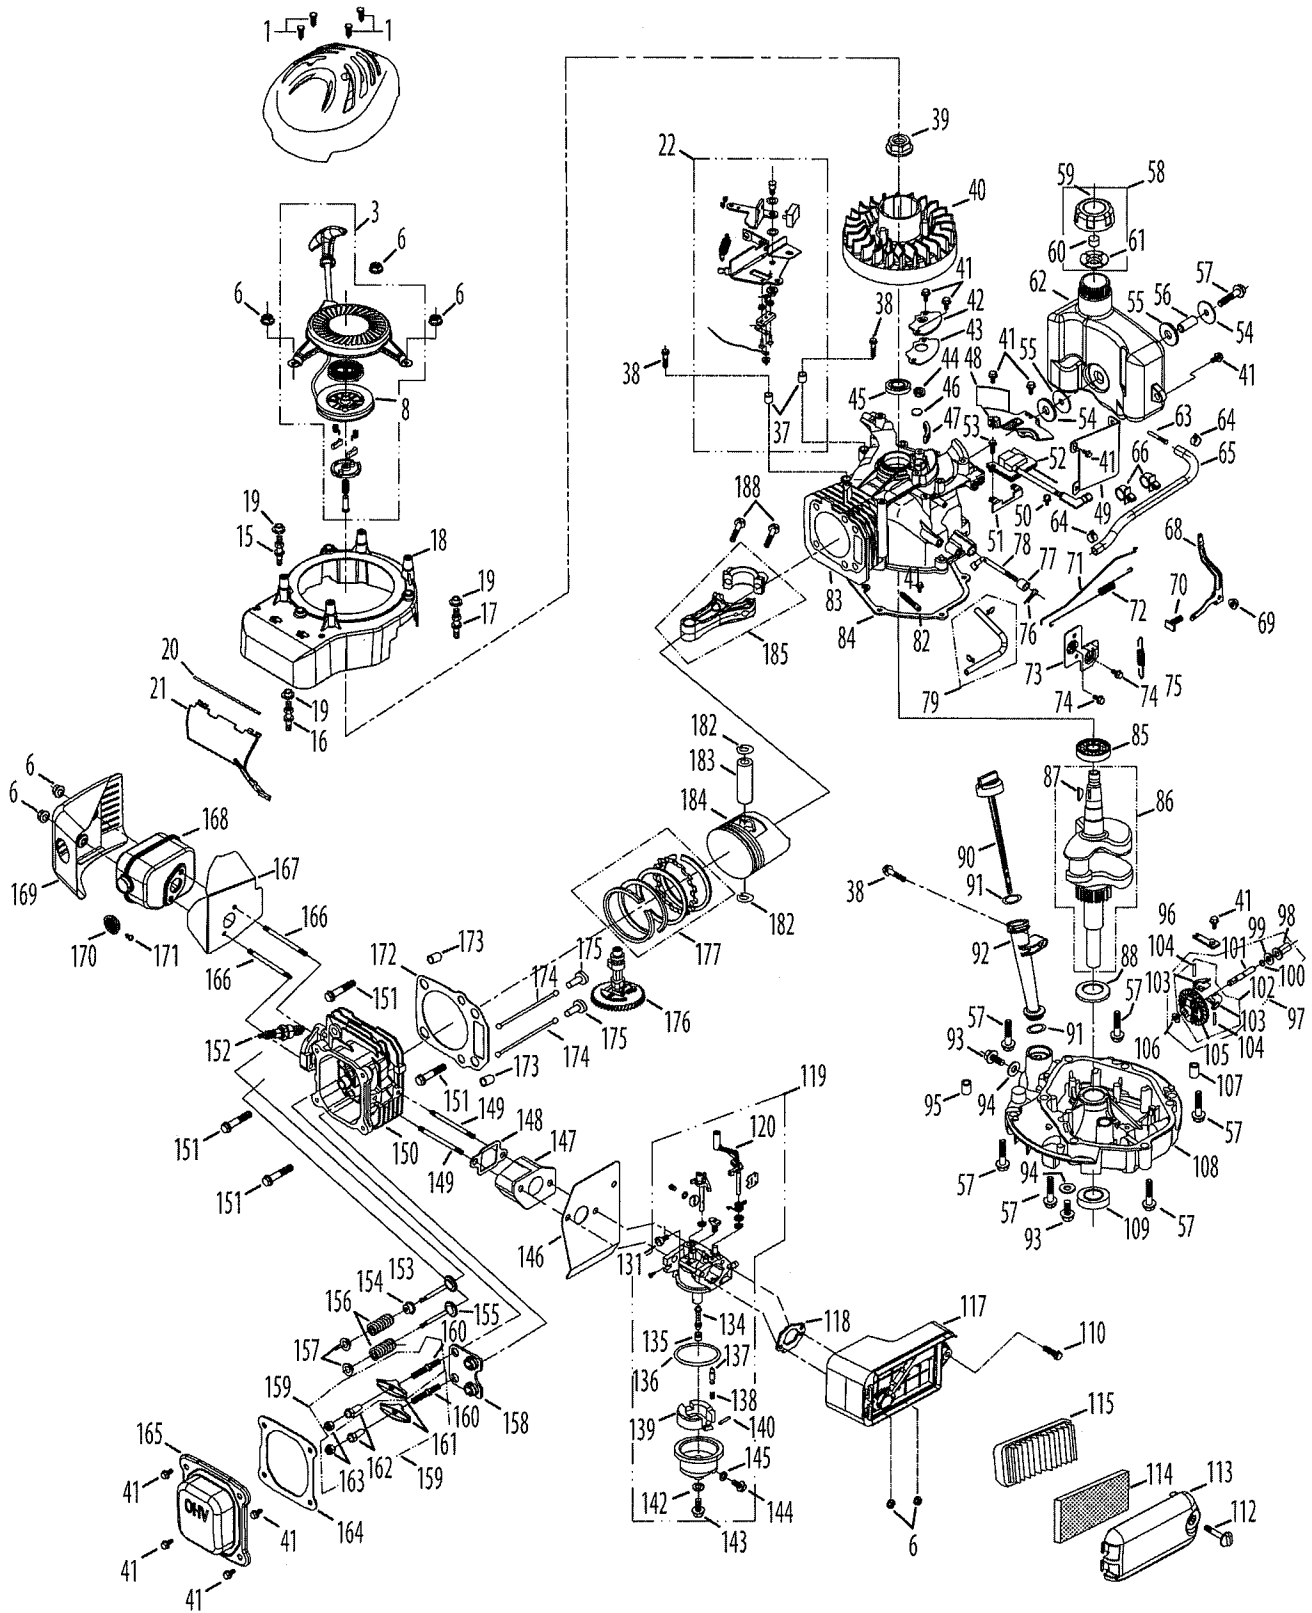

NOTE: Illustrated parts without a numeric call-out are not servicable components.

Engine Model 5P70MOB

Ref No.	Part Number	Description
1	710-04744	Self-Tapping Bolt, #12-16 x 1.0"
3	951-11720	Recoil Starter Assembly
6	712-04212	Nut M6 X 10 Mm
8	951-11721	Starter Pulley
15	710-04976	Starter/Shroud Stud M6x85-48
16	710-04977	Starter/Shroud Stud M6x87-51.5
17	710-04978	Starter/Shroud Stud M6x79
18	951-10764	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	951-11610	Air Vane Shaft
21	951-11611	Air Vane
22	951-10321A	Brake Assembly
37	750-05384	Brake Spacer
38	710-04980	Bolt M6x35
39	712-04221	Flywheel Nut M14
40	951-11046	Flywheel
41	710-04916	Bolt M6x14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	732-04718	Breather Spring
45	951-11545	Upper Crankshaft Seal
46	951-11735	Breather Valve
47	951-11762	Breather Screen
48	951-11616	Fuel Tank Bottom Bracket
49	951-11617	Tank/Label Bracket
50	951-11618	Plastic Clamp 6.3x8
51	951-11619	Ignition Coil Bracket
52	951-10366	Ignition Coil Assembly
53	710-04979	Bolt M6x18
54	736-04456	Fuel Tank Washer
55	951-10335	Rubber Bushing
56	750-05322	Fuel Tank Bushing
57	710-04922	Tank/Sump Bolt M8x50
58	951-10300	Fuel Cap Assembly
62	951-10368	Fuel Tank Assembly
63	951-10358	Fuel Filter
64	951-11731	Fuel Hose Clamp
66	723-04071	Plastic Support Clamp
68	951-11238	Governor Arm Bracket
69	712-04212	Governor Arm Nut M6
70	710-04908	Governor Arm Bolt
71	951-11259	Throttle Linkage

Ref No.	Part Number	Description
72	951-11258	Throttle Linkage Spring
73	951-11620	Component Bracket
74	710-04915	Bolt M6x12
75	951-10293	Governor Spring
76	714-04074	Governor Cotter Pin
77	951-11574	Governor Seal
78	951-11608	Governor Arm Shaft
79	951-11260	Breather Hose Assembly
82	951-11622	Flexible Clamp
84	951-11763	Crankcase Cover Gasket
85	951-11369	Main Bearing
86	951-11624	Crankshaft Assembly
87	951-10307	Woodruff Key
88	736-04491	Crankshaft Thrust Washer
90	951-11764	Dipstick
91	951-11547	Dipstick / Oil Fill Tube O-Ring
92	951-11765	Oil Fill Tube
93	710-04906	Oil Drain Plug
94	736-04440	Oil Drain Plug Washer
95	715-04089	Crankcase Cover Dowel 9x14
96	951-11625	Governor Gear Mounting Plate
97	951-11626	Governor Gear/Shaft Assembly
107	715-04092	Crankcase Cover Dowel 7x14
109	951-11627	Lower Crankshaft Seal
110	710-04969	A/F Base Bolt M6x30
112	951-10297	Air Filter Cover Thumb Screw
113	951-10412A	Air Filter Cover
114	951-10298	Air Filter, Sponge Pre-Filter
118	951-11257	Carburetor Gasket Plate
119	951-10765	Carburetor Assembly
136	951-11589	Fuel Bowl O-Ring
142	951-11348	Fuel Bowl Gasket
143	710-04945	Fuel Bowl Mounting Bolt
144	710-04903	Fuel Drain Plug
145	951-11349	Fuel Drain Plug Gasket
146	951-11766	Carburetor Gasket
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
149	710-04981	Carb Stud M6x113
151	710-04982	Head Bolt M8x54
152	951-10292	Spark Plug/F6rtc
153	951-10345	Intake Valve

Engine Model 5P70MOB

Ref No.	Part Number	Description
158	951-11629	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
162	751-11123	Fulcrum Nut
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
165	951-11548	Valve Cover
166	710-05094	Muffler Stud M6x95
167	951-11739	Muffler Gasket
168	951-10403	Muffler Assembly
169	951-10411	Muffler Shield
170	951-10351	Spark Arrestor
171	710-04983	Spark Arrestor Screw
172	951-11630	Cylinder Head Gasket
173	715-04108	Cylinder Head Dowel 10x16
174	751-10344	Push Rod
175	951-11607	Tappet
176	951-11767	Camshaft Assembly
177	951-11253	Piston Ring Set
182	951-11632	Piston Pin Snap Ring
183	951-11633	Piston Pin
184	951-11634	Piston
185	951-11768	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
—	951-10413A	Cylinder Head Assembly
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
150	—	Cylinder Head
153	951-10345	Intake Valve
154	—	Valve Seal
155	—	Exhaust Valve
156	—	Valve Spring
157	—	Valve Spring Retainers
158	951-11629	Push Rod Guide
160	710-04902	Rocker Arm Stud
161	—	Rocker Arm
162	751-11123	Fulcrum Nut
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket

Ref No.	Part Number	Description
—	951-10414B	Short Block Assembly
41	710-04916	Bolt M6x14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	732-04718	Breather Spring
45	951-11545	Upper Crankshaft Seal
46	951-11735	Breather Valve
47	951-11762	Breather Screen
57	710-04922	Tank/Sump Bolt M8x50
76	714-04074	Governor Cotter Pin
77	951-11574	Governor Seal
78	951-11608	Governor Arm Shaft
83	—	Crankcase Complete
84	951-11763	Crankcase Cover Gasket
85	951-11369	Main Bearing
86	951-11624	Crankshaft Assembly
88	736-04491	Crankshaft Thrust Washer
91	951-11547	Dipstick / Oil Fill Tube O-Ring
93	710-04906	Oil Drain Plug
94	736-04440	Oil Drain Plug Washer
95	715-04089	Crankcase Cover Dowel 9x14
96	951-11625	Governor Gear Mounting Plate
97	951-11626	Governor Gear/Shaft Assembly
107	715-04092	Crankcase Cover Dowel 7x14
108	—	Crankcase Cover - dual drain
109	951-11627	Lower Crankshaft Seal
118	951-11257	Carburetor Gasket Plate
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket
173	715-04108	Cylinder Head Dowel 10x16
175	951-11607	Tappet
176	951-11767	Camshaft Assembly
177	951-11253	Piston Ring Set
182	951-11632	Piston Pin Snap Ring
183	951-11633	Piston Pin
184	951-11634	Piston
185	951-11768	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt

Engine Model 5P70MOB

Ref No.	Part Number	Description
—	951-11765	Oil Filler Tube Assemblby
91	951-11547	Dipstick / Oil Fill Tube O-Ring
92	951-11765	Oil Fill Tube
—	951-11764	Dipstick Assembly
90	951-11764	Dipstick
91	951-11547	Dipstick / Oil Fill Tube O-Ring
—	951-10300	Fuel Cap Assembly
59	—	Fuel Cap
60	—	Foam Insert
61	—	Vent Gasket
—	951-10412A	Air Cleaner Housing Ass'y Comp
113	951-10412A	Air Filter Cover
117	—	Inner Air Cleaner Housing
—	951-10342	Muffler Stud Assemblby
166	710-05094	Muffler Stud M6x95
—	951-11721	Recoil Spring and Pulley Ass'y
7	—	Rope Return Spring
8	951-11721	Starter Pulley
—	951-10364	Fuel Line Kit
63	951-10358	Fuel Filter
64	951-11731	Fuel Hose Clamp
65	—	Fuel Hose
—	951-10370	Oil Drain Plug and Washer Ass'y
93	710-04906	Oil Plug
94	736-04454	Oil Plug Washer
—	951-11770	Gasket Kit - Complete
43	951-11729	Breather Gasket
45	951-11545	Upper Crankshaft Seal
77	951-11574	Governor Seal
84	951-11763	Crankcase Cover Gasket
91	951-11547	Dipstick / Oil Fill Tube O-Ring
94	736-04454	Oil Drain Plug Washer
109	951-11627	Lower Crankshaft Seal
146	951-11766	Carburetor Gasket
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket
—	951-10345	Valve Kit
153	951-10345	Intake Valve
155	—	Exhaust Valve

Ref No.	Part Number	Description
—	951-11772	Gasket Kit - External
43	951-11729	Breather Gasket
91	951-11547	Dipstick / Oil Fill Tube O-Ring
94	736-04440	Oil Drain Plug Washer
146	951-11766	Carburetor Gasket
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
—	951-10344	Push Rod Kit
174	951-10344	Push Rod
—	951-11773	Carburetor Kit - Major
120	—	Choke & Throttle Shaft Dust Seals
131	—	Idle Speed Adjusting Screw
134	—	Main Nozzle / Emulsion Tube
135	—	Main Jet
136	951-11589	Fuel Bowl O-Ring
137	—	Needle Valve (Float)
138	—	Needle Valve Spring
139	—	Float
140	—	Float Pin
142	951-11348	Fuel Bowl Gasket
145	951-11349	Fuel Drain Plug Gasket